

## VIDEO OPTIMIZATION

### **If the picture is too dark, the brightness setting may be too low.**

By adjusting the TV's brightness level, you can control the black level detail of the video. Lower brightness creates darker blacks and gives colors more depth. A higher brightness setting will reduce the black and lighten up dark scenes.

### **If the TV is too bright when watching in the TV dark you'll need to adjust the backlight settings to dim the overall luminance of the panel.**

Reducing the backlight will also reduce energy consumption, and extend the life of the TV.

### **Adjust colour saturation if the picture is too red or too green.**

It can be done by adjusting tint or hue.

### **If the colour is oversaturated that means the TV might be in showroom mode.**

Go to the colour settings and switch the mode to TV, Movie or game.

### **If none of the above work,**

check the video settings of the playback device. It might have its own colour settings.



Disconnect all power sources before making any connections  
Débranchez toutes les sources d'énergie avant d'établir tous les rapports  
Desconecte todas las fuentes de energía antes de hacer cualesquiera conexiones



Refer to User Manual for complete installation instructions  
Référez-vous au manuel d'utilisateur pour des instructions complètes d'installation  
Refiera al manual de usuario para las instrucciones completas de instalación